

SERIES
ACCESSORIES

ML-16HR

video door panel



User manual

Thank you for
choosing our equipment

SLINEX {Design. Uniqueness. Innovations}

Safety instructions

Read and keep that manual.

The device installation process should be carried out by the qualified specialists. Use the device from the -40°C to $+65^{\circ}\text{C}$, always keep it within that temperature range.

Installation surface should be free from vibration and impact influence.

Keep this device far from open sources of heat, such as radiators, heaters, and ovens.

The device can be installed near other electronic equipment in case if the temperature of the environment does not exceed previously mentioned range.

The device should be protected from the direct influence of the natural phenomena, such as direct sunlight, rain or snow.

Don't use aggressive or abradant detergent for the device surface cleaning.

Use soft wet cloth or tissue to remove strong dirt.

Attention!



As a result of continuous upgrades and functionality improvements, technical characteristics of the device can be changed without any preliminary declaration.

This manual can contain some inaccuracy or misprint.

The owner reserves the right to make corrections to the information described in the user manual and device package.

The last revision of this manual is available on www.slinex.com

Nature protection



Don't throw away the device with other industrial or nutritive trash if you see that symbol. Some regions have separation and recycling systems for the electronic equipment.

Connect with local authorities to receive information about recycling of electronic equipment for your region.

Rights and limitation of liability

All rights reserved. Any part of that document can not be published in any form, translated into other languages or reproduced in any way including electronic or mechanical.

Document recording and copying is strictly denied without owner permission.

Table of contents

1. Package	4
2. Specification	4
3. Description	6
4. Schematic diagram	7
5. Installation	8
6. Limited Warranty	9

1. Package

ML-16HR door panel – 1 pc.

Angle bracket – 1 pc.

Rainshield – 1 pc.

Mounting screws and nuts – 1 pkg.

User manual – 1 pc.

2. Specification


Sensor type	1/3" CMOS
Resolution	800 TV-lines
View angle	65°
Night backlight	Infrared LED's. 1,5 m distance
Voltage	+12 V
Lock relay continuous current	1 A
Power consumption	2,4 W in working mode
Installation type	Surface mount
Dimensions	41×122×23 mm
Working temperature	–40 ... +65 °C



ML-16 wire colors


Red	Power, +12 V
Black	Ground (GND)
White	Audio
Yellow	Video
Brown	COM relay contact
Blue	N.O. relay contact

3. Description

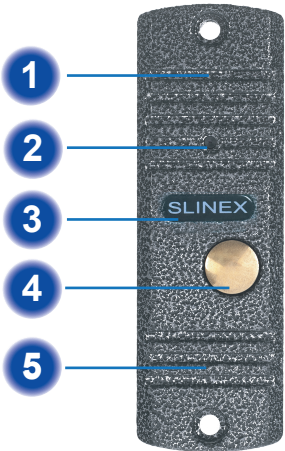


1	Microphone
2	Video camera
3	Night infrared backlight
4	Call button
5	Speaker

4. Schematic diagram

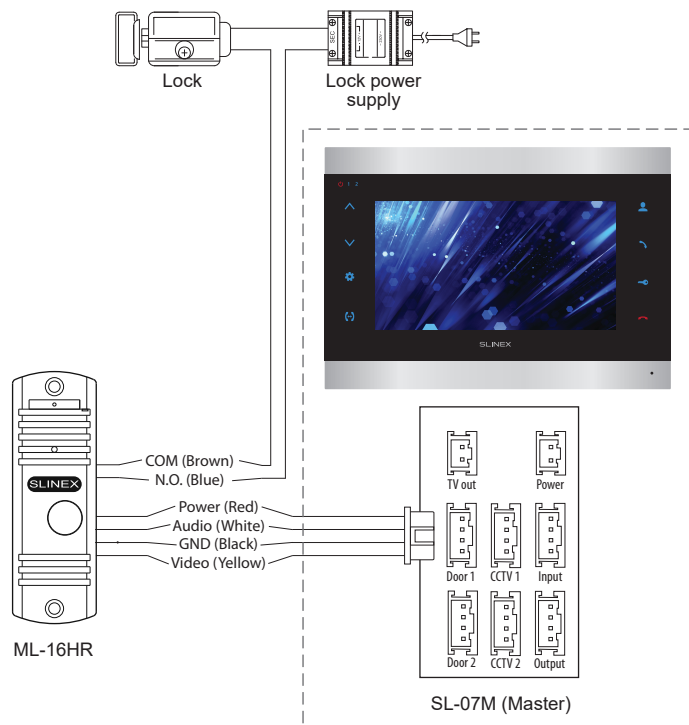

5. Installation

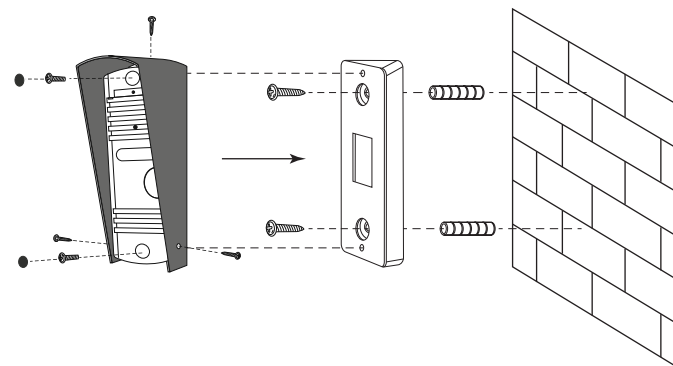

- 1) Take the angle bracket from the kit and situate it 150-160 cm from the floor line;
- 2) Mark and drill two holes inside the wall;
- 3) Take two nuts from the kit and hammer them into the drilled holes;
- 4) Fix angle bracket on the wall by two screws from the kit;
- 5) Connect all communication wires and fix the door panel on the angle bracket by two screws from the faceplate side. Then stick the caps on the mounting screws.

6. Limited warranty

Manufacturer guarantees product normal functioning during the warranty period if the user keeps all safety instructions described in that manual.

Warranty period is 12 months from the moment of the product purchasing (warranty period could be extended up to 24 months or more, depending on the local regulations).

Warranty period allows user to make guarantee repair in cases when normal functioning of the product was violated by the fault of manufacturer and the user haven't offend transporting, installation and working conditions.

This limited warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair or modification.

Warranty void in such cases:

- the product was damaged by the fault of the customer;
- the product wasn't properly installed according recommendations from the manual;
- the sticker on the backside of the product was broken;
- the product was not used for its intended function.

This limited warranty covers only repair, replacement, refund or credit for defective products, as provided above. Manufacturer is not liable for, and does

not cover under warranty, any damages or losses of any kind whatsoever resulting from loss of, damage to, or corruption of, content or data or any costs associated with determining the source of system problems or removing, servicing or installing products. This warranty excludes third party software, connected equipment or stored data. Manufacturer is therefore not liable for any losses or damage attributable to third party software, connected equipment or stored data.

In the event a product has been discontinued, manufacturer shall either repair the product, offer to replace it with a comparable product or provide a refund at the lesser of the purchase price or the product's current value.

Repaired or replacement products will continue to be covered by this limited warranty for the remainder of the original warranty term.